

Fig. 1

K1	DVD	K2	AUX/Cabl	K3	VCR	K4	TV2	K5	TV1
K6	MENU	K7	Adjustment -	K8	Adjustment +	K9	Function selection	K10	Sete
K11	Power 2	K12	TV/AV	K13	Mute	K14	Power 1	K15	disply
K16	1 (Aa)	K17	2 (Ao)	K18	3 (B)	K19	Volume - (Pa,Q	K20	F 1 /
K21	4 (C,D	K22	5 (E,F	K23	6 (G	K24	Volume + (Ph	K25	F 2 /
K26	7 (F	K27	8 (H	K28	9 (I,J	K29	Channel - (O	K30	F 3 /
K31	10 (K,L	K32	0 (Ma	K33	RET(Mi	K34	Channel + (N	K35	F 4 /
K36	STOP(R	K37	PLAY (Sa	K38	REW (sc	K39	FF (so	K40	ADD/
K41	REC(xyz	K42	Pause(uvw	K43	CATV(To	K44	MTS(Ta	K45	

Fig. 2

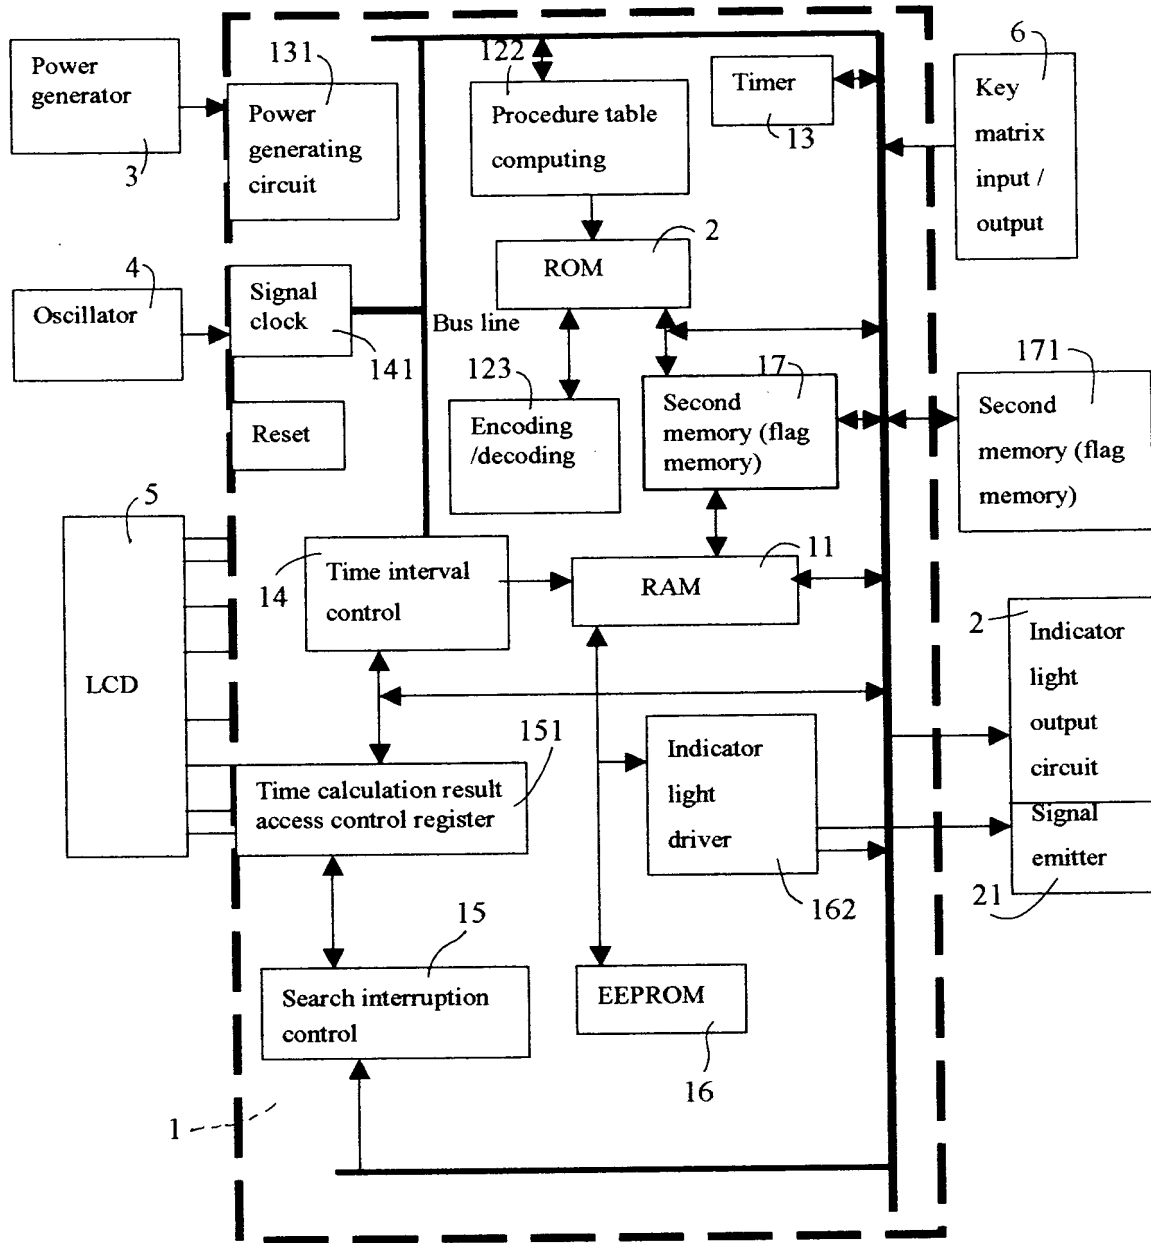


Fig. 3

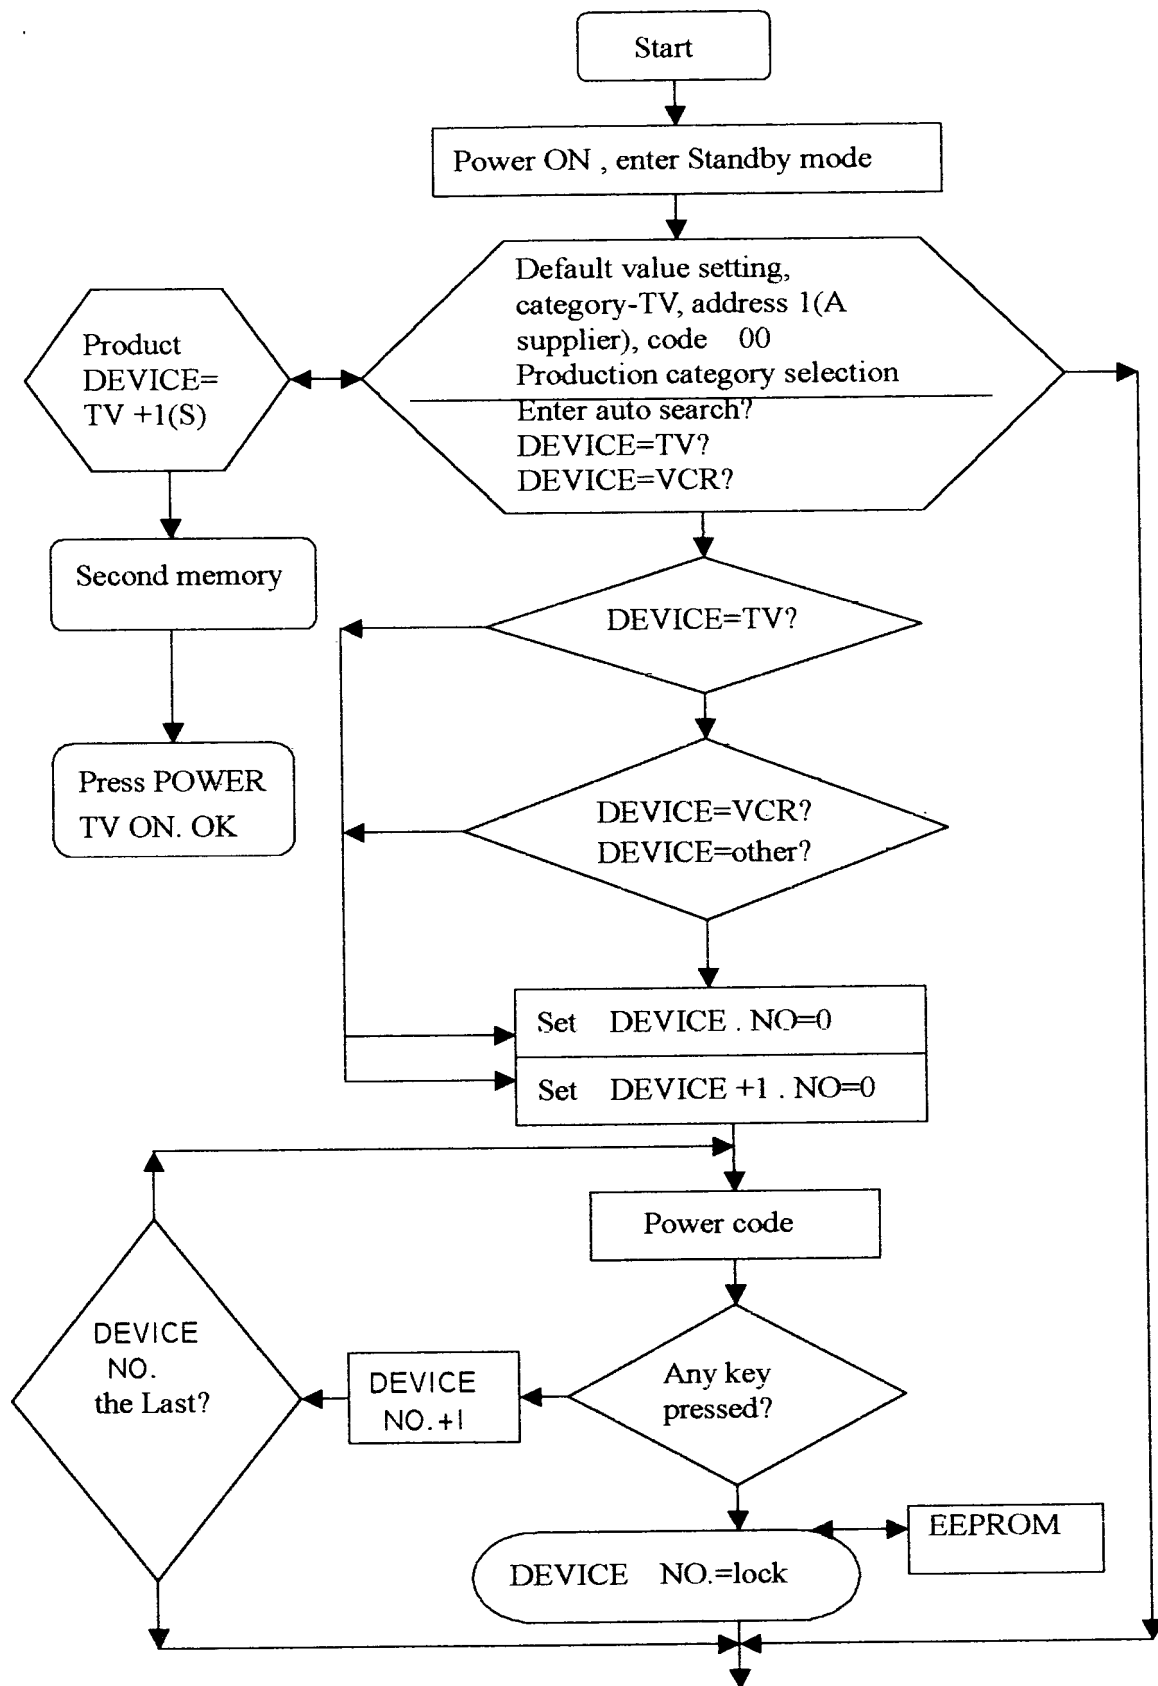


Fig.4

Left auto searching

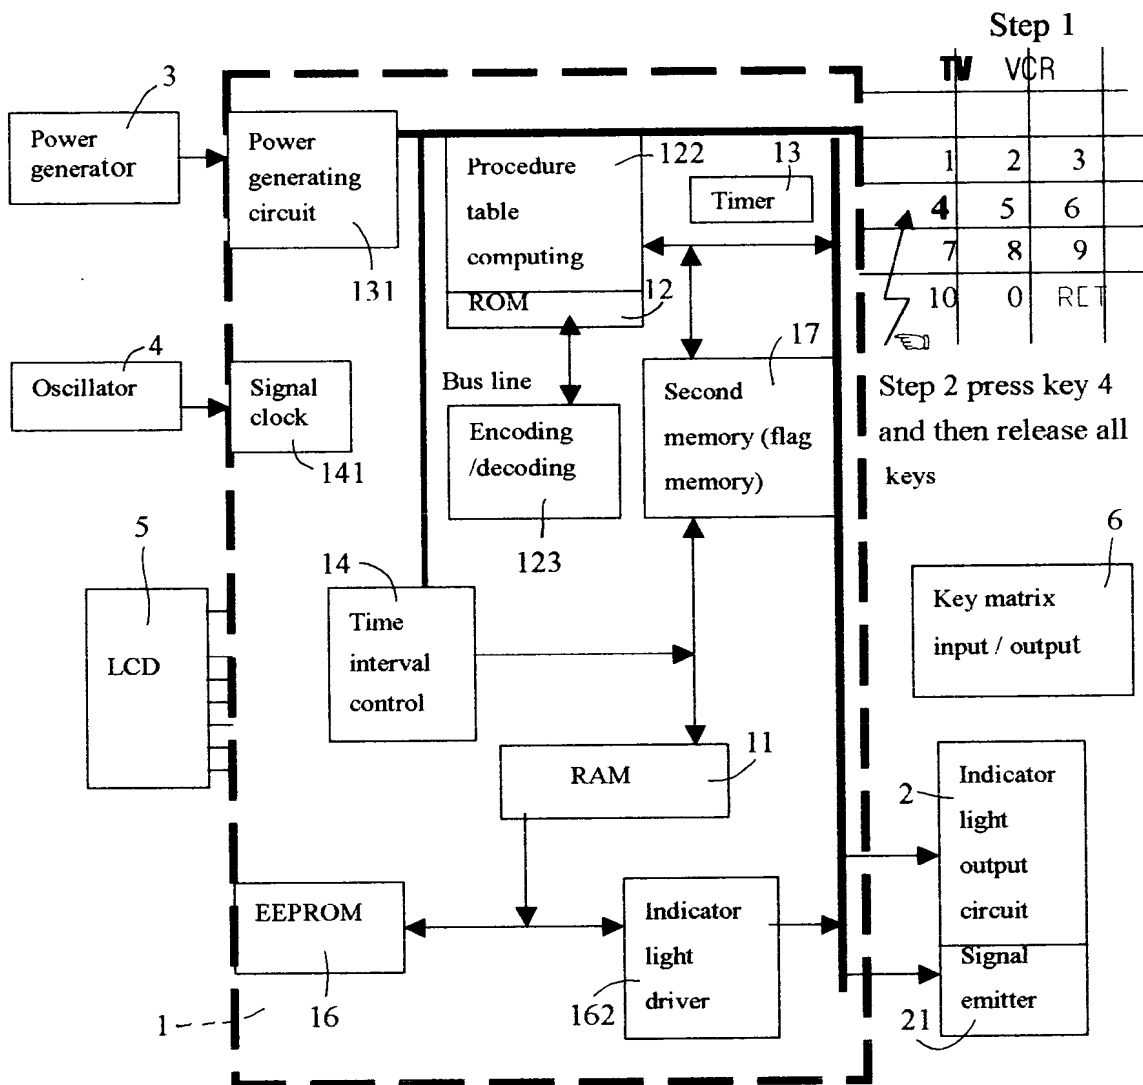


Fig. 5

Step 1 keeps the key TV pressed

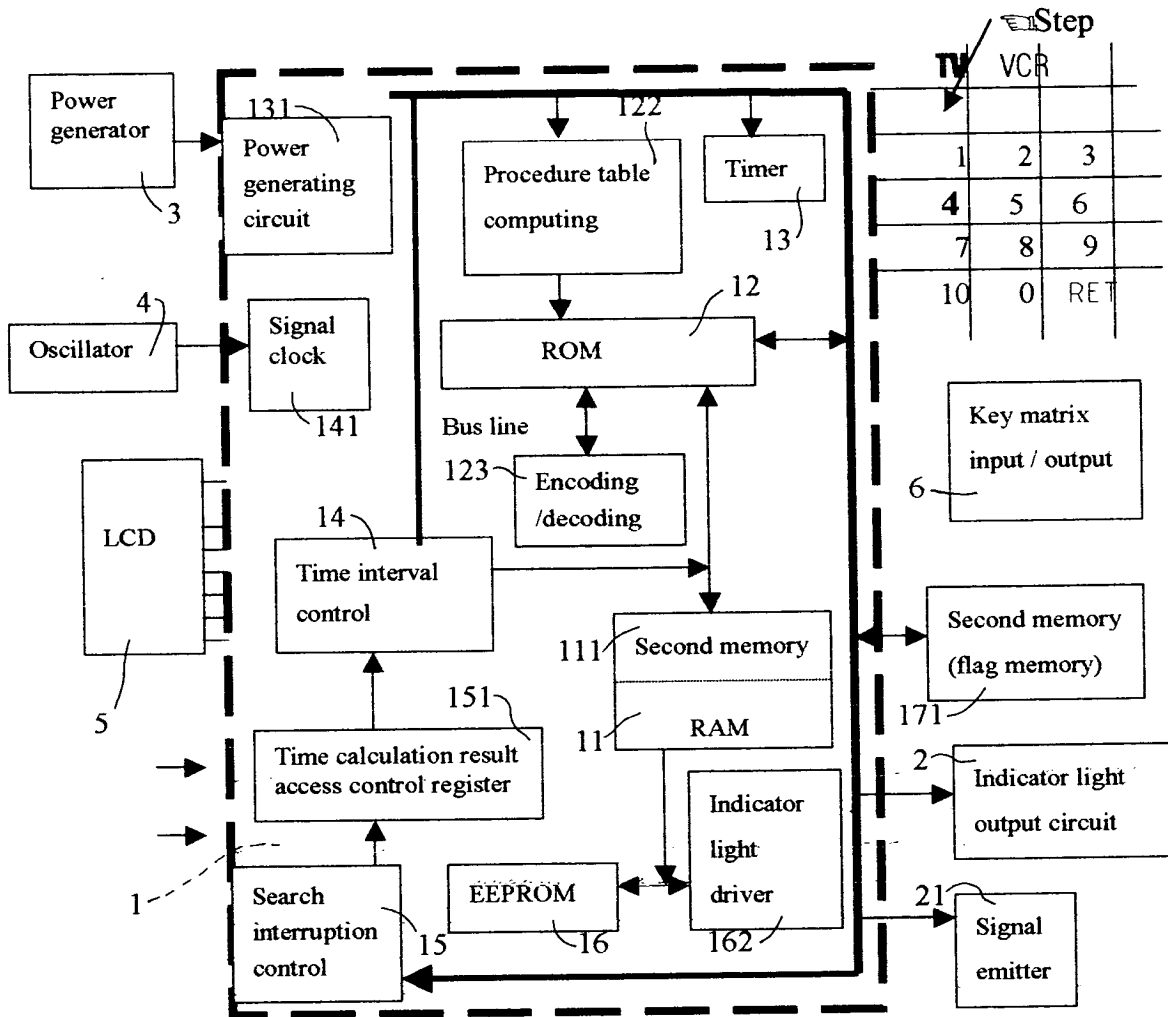


Fig. 5-1

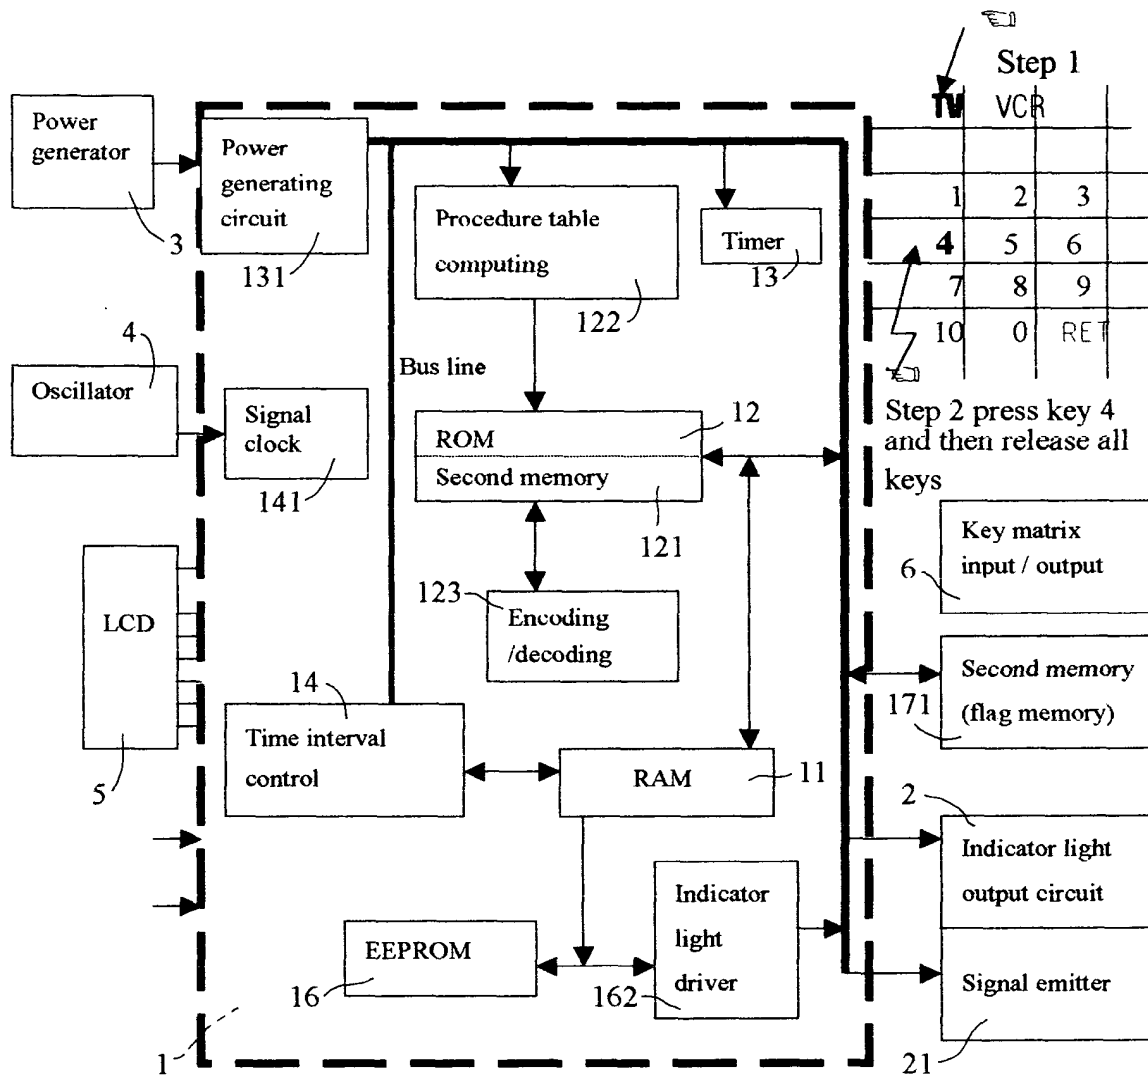


Fig. 5-2






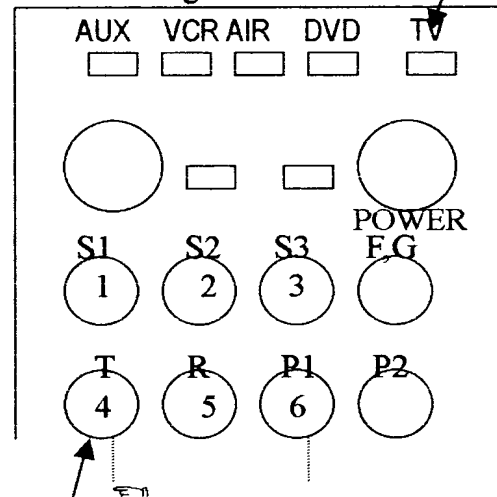
Fig. 6



Single-key auto search setting

Fig. 7A

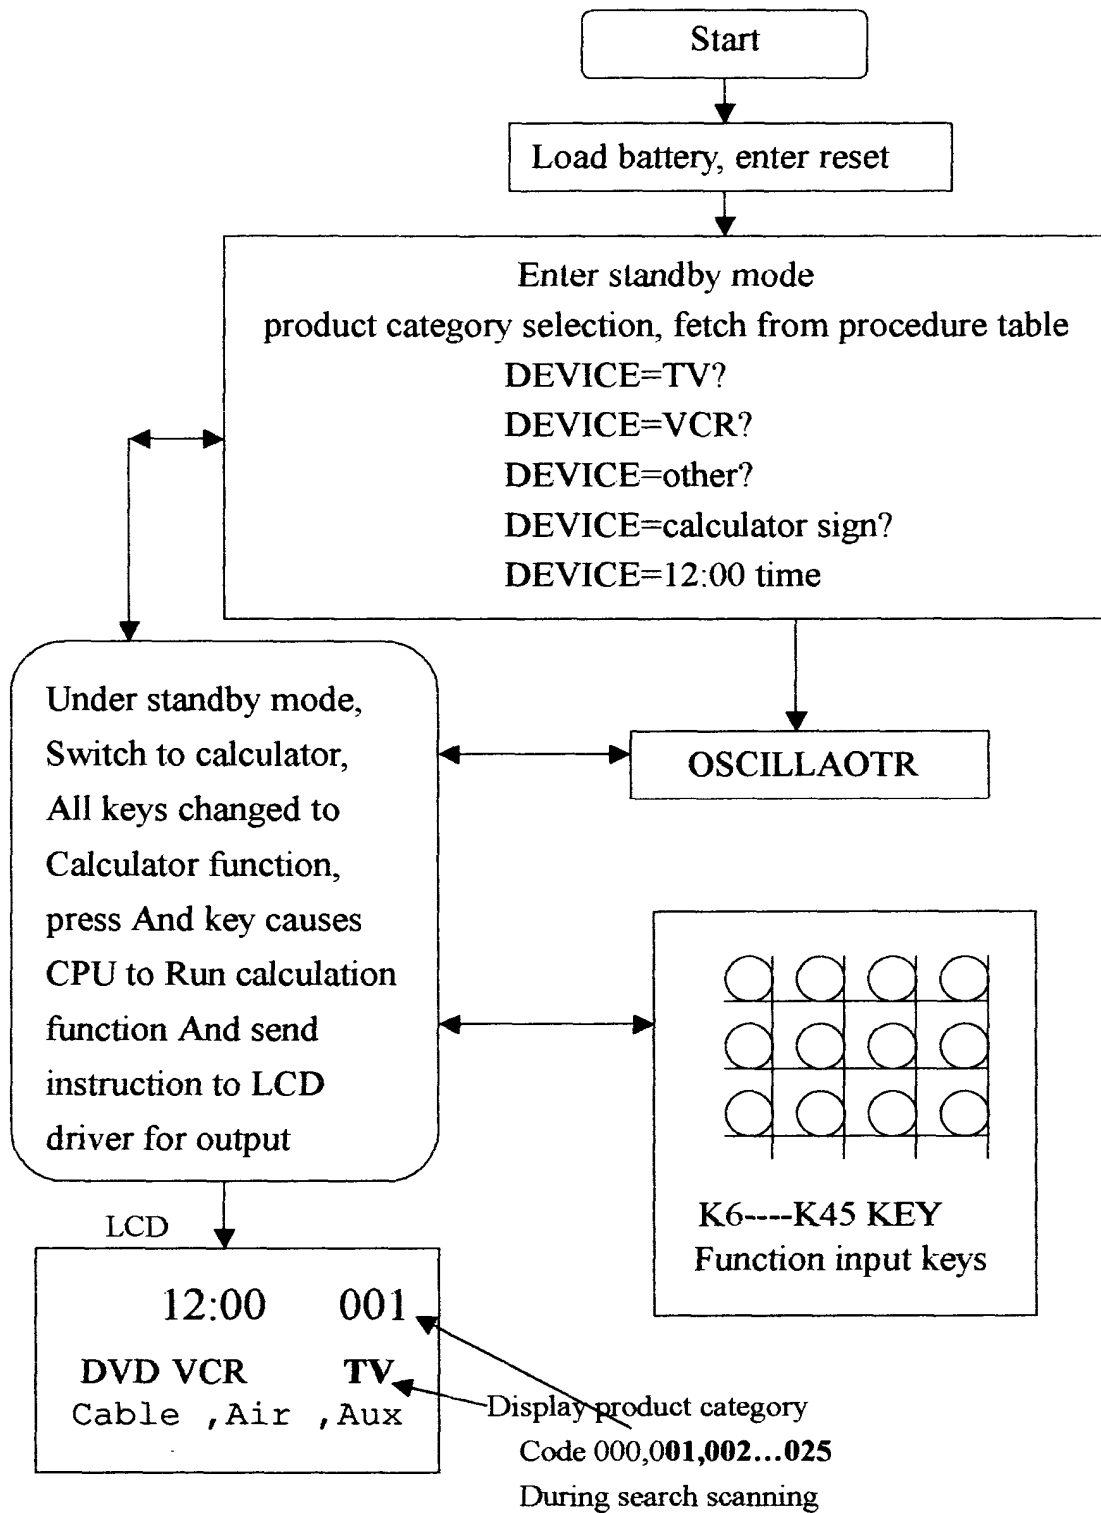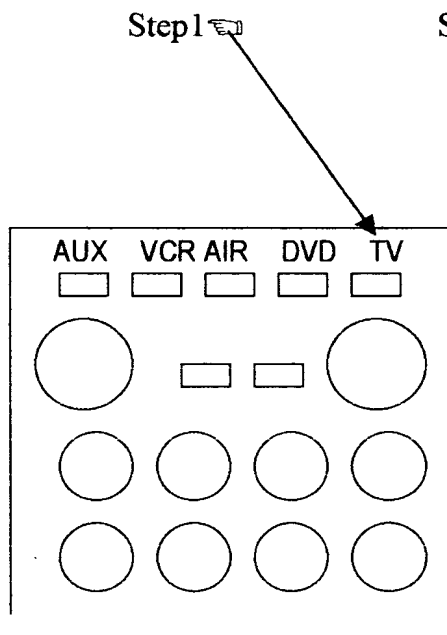Step 1  Keep category TV key pressed, indicator light is on



Step 2 , press key 4 and then release both keys

Product model single code direct setting

Fig. 7B

Time setting Step 1 Press category selection key to show 12:00 flashing on LCD

Step 2 Press power key

Step 3 press numerical keys 0,1,2~9

Step 4 Press subscribing power key

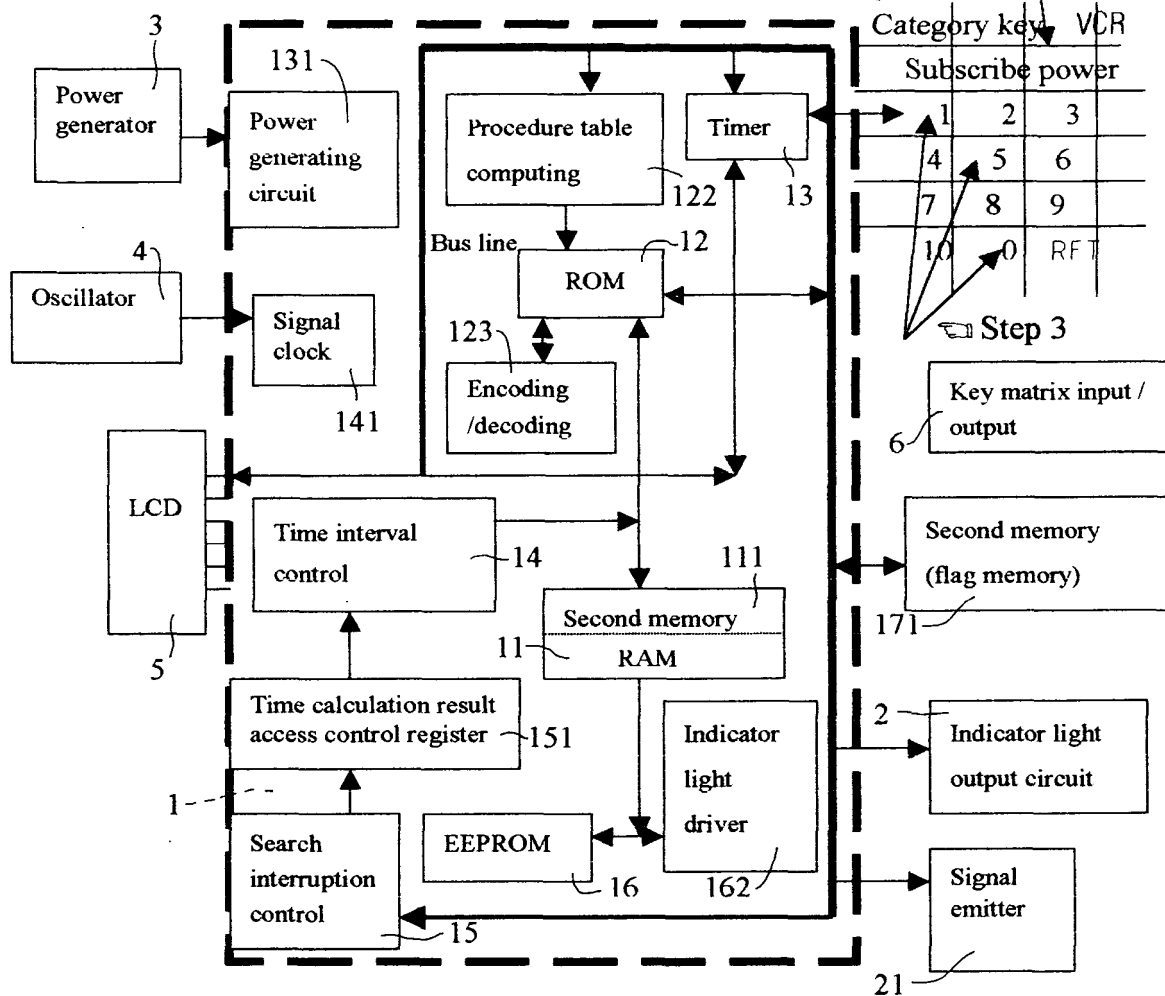


Fig. 8